



## Product Name Vario Bond

A High Performance Airtight Plasterable Junction Tape For Windows, Doors and Timber to Block Connections, for use with our VARIO membranes as part of our VARIO Airtightness and Moisture management system

Part of the Vario range



# Vario Bond



## BENEFITS AND FEATURES

<b>MULTI-APPLICATION</b>	Internal & external use
<b>PLASTERABLE</b>	Can be plastered or rendered over with Gypsum based undercoat plasters, sand and cement and exterior renders
<b>STRENGTH</b>	High adhesive strength – bonds to variety of substrates
<b>HIGH PERFORMANCE</b>	Airtight, windtight and driving rain proof
<b>EASY TO INSTALL</b>	Pre-split, with finger-lift function for easy installation

## STANDARDS & CERTIFICATION

<b>QUALITY</b>	We hold a Quality Management Standard BS EN ISO 9001: 2008 for manufacturing.
<b>CE</b>	All products are manufactured in accordance with the CE marking requirements under the Construction Products Regulation,
<b>PRODUCT STANDARDS</b>	All our products are manufactured in accordance with product standard: BS EN 13162: 2008 and BS EN 13172 Evaluation of Conformity.
<b>ENVIRONMENT</b>	ISOVER is an ISO 14001:2004 (Environmental Management System) accredited manufacturing facility. This accreditation ensures that all products are manufactured to the stringent standards set out by this management system. EN ISO 13162 EMS 551706 003 BS EN ISO 9001: 2000
<b>INDOOR AIR QUALITY</b>	Vario Bond has been certified for indoor air quality and holds the GEV Emission EC1+.

For more applications and product details, please visit [www.isover.ie](http://www.isover.ie)



## Vario Bond Applications



Timber wall plate to block junction



Window junctions



Floor to wall junctions

### JUNCTIONS

- ✓ Timber wall plate
- ✓ Internal Windows
- ✓ External Windows
- ✓ Internal Floors

### SUBSTRATES

- ✓ Vario Membrane
- ✓ Timber
- ✓ PVC
- ✓ Concrete Block
- ✓ Metal & Concrete Lintels
- ✓ PVC Cavity Closers

# Basic Installation Steps

---



1. Prepare and install any corner details for wall, window or floor corner sections, before you begin further application.



6. Use roller to firmly ensure good adhesion to background.




2. For ceiling to wall connections, cut the Vario membrane with a 15mm lip down the wall.



7. Repeat the above installation steps for both window detailing and floor to wall detailing. Refer to our full installation guide for application specifics.



3. Apply 15mm edge strip from Vario Bond to Vario membrane.

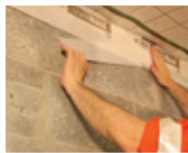

4. Remove centre strip from Vario Bond and apply to background.



8. Once tape has been applied to all connections, proceed with plastering with Gypsum based plaster or Sand & Cement



5. Remove end strip from Vario Bond and apply to background.



ISOVER Ireland  
Unit 4, Kilcarbery Business Park,  
Nangor Rd., Dublin 22  
Tel: +353 (0) 1 629 8400  
Email: [info@isover.ie](mailto:info@isover.ie)  
Web: [www.isover.ie](http://www.isover.ie)

ISOVER Technical Team  
ROI Free Phone: 1800 744 480  
NI Phone: 0845 399 0159  
Email: [tech.ie@saint-gobain.com](mailto:tech.ie@saint-gobain.com)